


Removal

- 1 Unscrew fastening screws (1) of licence plate lamps and remove licence plate lamps.

Sedan, coupe

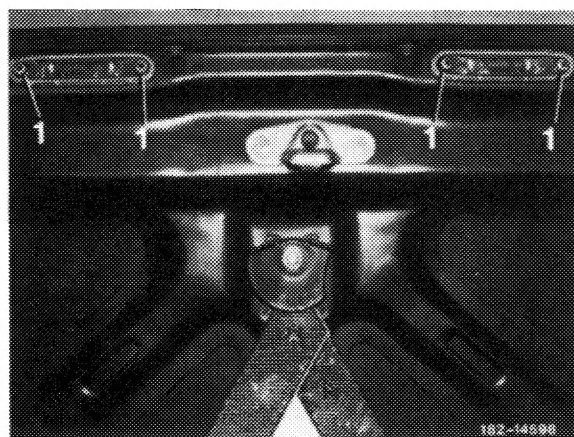

Installation

- 2 For installation proceed vice versa.

T-sedan

